



Owner's Manual

MODEL # CT087 / Noahs Ark

Dimensions: 36" x 36" x 48" (H)



DESCRIPTION	QTY.
POP-UP TENT	
100% Polyester	1 _____
STAKES	
Steel	4
CARRY POUCH	
100% Polyester	1 _____

ASSEMBLY INSTRUCTIONS

STEP 1:

Confirm product contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

STEP 2:

Select a smooth level site and spread out your tent.

STEP 3:

Pull tent frame apart to pop open tent.

CAUTION: Tent has inner steel wire which may spring open suddenly while attempting to assemble tent.

TIP: Frame may need minor adjustment when tent is set up. Gently bend frame into shape if sagging appears.

STEP 4:

Attach roof to main structure with "hook and loop" tabs.

STEP 5:

Stake tent to ground if playing outside to avoid tent toppling over.

DISASSEMBLY INSTRUCTIONS

STEP 1:

Remove roof from tent.

STEP 2:

Pick up the tent and lay it on its side.

STEP 3:

Grasp the top of frame and push one of the corners INTO the structure towards the OPPOSITE corner.

STEP 4:

The structure will now fold flat.

STEP 5:

Grasp 2 DIAGONALLY OPPOSITE corners and bring them together in one hand. (You now have a loop above and below your hand)

STEP 6:

Kneel down and place the bottom loop on the ground.

STEP 7:

Grasp the outer edge of the top loop furthest away from you and fold inward toward the lower loop and lay flat on the ground. (You now have 2 loops on top of a larger one)

STEP 8:

Slide one of the smaller loops over the one next to it and grasp the outside edges of the entire folded playhouse.

STEP 9:

Slowly move your hands around the outside edges to make all of the loops the same size.

STEP 10:

Place folded structure into carry case.

STEP 11:

Fold roof and repeat steps 5 through 10 to store roof inside carry case.

For questions or concerns call Gigatent at our Toll Free Number: 877-836-8701
Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST or
email us at customerservice@gigatent.com
For replacement parts login to gigatent.com/replacements

WASHING & CARE INFORMATION

Hand wash using a mild dishwashing soap and soft sponge, then allow the fabric to completely air dry. To prevent mold or mildew do not store wet or damp.

WARNING :
NEVER LEAVE CHILDREN UNATTENDED.
WINDY CONDITIONS MAY UPROOT THE TENT.
ALWAYS STAKE DOWN TENT.
ADULT SUPERVISION REQUIRED.
AGES 3 AND UP RECOMMENDED.

CAUTION:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty

WARNING:

Keep all flame and heat away from tent and tent fabric. This tent meets flammability requirements of CPFA -84. THIS TENT IS NOT FIRE PROOF. IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION:

Never use any fuel-burning or oxygen-consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death

Contents and colors may vary. Please retain package or future reference.


Manufactured in China for
Gigatent
55 Haul Rd
Wayne, New Jersey 07470
www.gigatent.com
1-877-836-8701

TO VIEW FULL SELECTION OF OUR
PLAY TENT PRODUCT LINE,
GO TO WWW.GIGATENT.COM

STYLE #:CT087



Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care).

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing customerservice@gigatent.com. We highly recommend logging on to our website at www.gigatent.com should you need customer service. Any parts in need of replacement after the 14 Day Manufacturer's Warranty can be purchased for a reasonable charge, plus shipping and handling. We require that products accepted for any repair must be properly cleaned according to our care instructions.

WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

WARNING : NEVER LEAVE CHILDREN UNATTENDED.

AGES 3 AND UP RECOMMENDED.

Play tent for indoor and outdoor use.

Keep all Flame and Heat away from tent and tent fabric.

This tent meets flammability requirements of CPAI-84.

THIS TENT IS NOT FIRE PROOF.

IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION: Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.

MADE IN CHINA.