




Owner's Manual

MODEL # CT025/ My First Summer Home
Dimensions: 54" x 45" x 54"(H)



DESCRIPTION	QTY.
TENT	
100% Polyester	1
CARRY POUCH	
100% Polyester	1
POLES	
Fiberglass	11

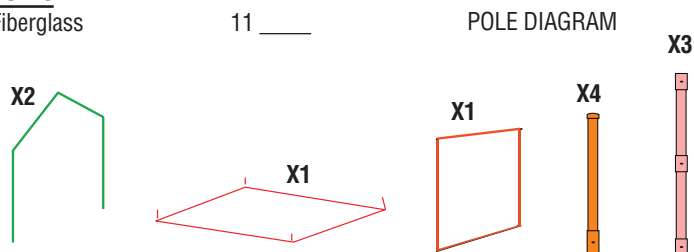

ASSEMBLY INSTRUCTIONS

STEP 1:

Confirm product contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

STEP 2:

Select a smooth level site and spread out your tent.

STEP 3:

Remove the folded poles from the carry bag and assemble all sections. Lay the opened poles next to the play tent.

STEP 4:

There are 2 sets of poles in the shape of a rectangle; 1 large and 1 small. Take the larger one and lay it on the ground with the corner sockets facing up this is the base. **(figure A)**

STEP 5:

Next, take one of the 2 sets of poles shaped like a V and place the ends into the corner sockets on the short end of the base making sure that the 3 sockets are facing into the tent, repeat for the other V shaped pole. **(figure B)**

STEP 6:

There are 3 poles made up of 2 sections, these connect the walls together. Take these poles and insert the ends into the sockets on the front and rear sets of poles. The sockets are located at the bends in the poles. The tent body is complete except for the cover. **(figure C)**

STEP 7:

Take the play tent and drape it over the frame. **(figure D)**

STEP 8:







Assemble the porch frame by inserting the ends of the four 1 piece poles into the corner sockets on the smaller rectangle. **(figure E)**

STEP 9:

Turn this on its side and insert the ends of the 4 poles into the pole pockets located underneath the porch roof and on top of the porch floor. Attach to the outside of the porch frame using the Velcro tabs on the roof and floor.

STEP 10:

Fold the sides of the roof down to cover the end of the frame.

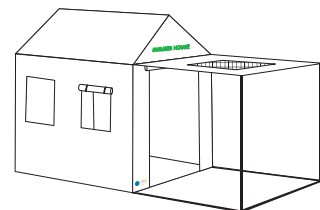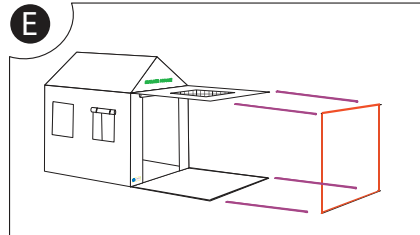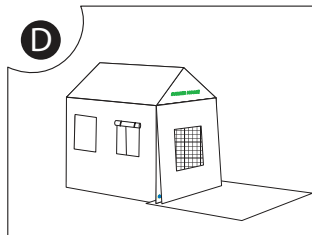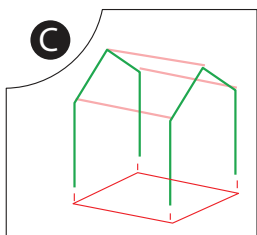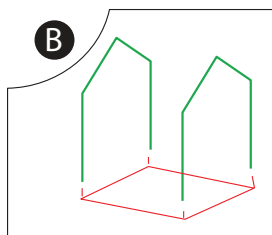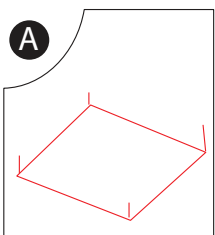



Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing customerservice@gigatent.com. We highly recommend logging on to our website at www.gigatent.com should you need customer service. Any parts in need of replacement after the 14 Day Manufacturer's Warranty can be purchased for a reasonable charge, plus shipping and handling. We require that products accepted for any repair must be properly cleaned according to our care instructions.

WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

**WARNING : NEVER LEAVE CHILDREN UNATTENDED.
AGES 3 AND UP RECOMMENDED.**

Play tent for indoor and outdoor use.

Keep all Flame and Heat away from tent and tent fabric.

This tent meets flammability requirements of CPAI-84.

THIS TENT IS NOT FIRE PROOF.

IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION: Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.

MADE IN CHINA.

WASHING & CARE INFORMATION

Hand wash using a mild dishwashing soap and soft sponge, then allow the fabric to completely air dry. To prevent mold or mildew do not store wet or damp.

CAUTION:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

CAUTION:

Never use any fuel-burning or oxygen-consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.



TO VIEW FULL SELECTION OF OUR
PLAY TENT PRODUCT LINE,
GO TO WWW.GIGATENT.COM

STYLE #:CT025

WARNING :
NEVER LEAVE CHILDREN UNATTENDED.
WINDY CONDITIONS MAY UPROOT THE TENT.
ALWAYS STAKE DOWN TENT.
ADULT SUPERVISION REQUIRED.

AGES 3 AND UP RECOMMENDED.

WARNING:

Keep all flame and heat away from tent and tent fabric. This tent meets flammability requirements of CPAI-84. THIS TENT IS NOT FIRE PROOF. IF LEFT IN OPEN FLAME THE TENT WILL BURN.

Contents and colors may vary. Please retain package or future reference.

For questions or concerns call Gigatent at our Toll Free Number: 877-836-8701
Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST
or email us at customerservice@gigatent.com
For replacement parts login to gigatent.com/replacements