



DESCRIPTION	QTY.
TENT 100% Polyester	1 ____
POLES Fiberglass Pole; Black	2 ____
MATTRESS COVER Poly/Cotton Blend	1 ____

ASSEMBLY INSTRUCTIONS

STEP 1:

Confirm product contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

STEP 2:

Place mattress cover over mattress with Velcro up. **(figure A)**

STEP 3:


Extend poles and place in position ready for installation.

STEP 4:

Carefully push one of the poles through the pole sleeve **(figure B)** until it comes out of the other end. Repeat for other pole and insert all pole ends into black pole pockets on the corner of tent. **(figure C)**

STEP 5:

Place the tent onto the bed and line up the tent with the Velcro on the mattress cover and make sure they are attached.

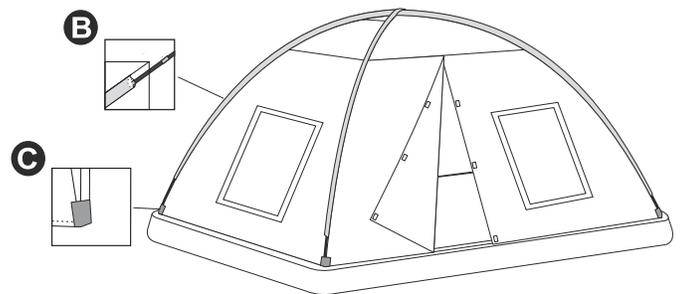

WASHING & CARE INFORMATION

Hand wash using a mild dishwashing soap and soft sponge, then allow the fabric to completely air dry. To prevent mold or mildew do not store wet or damp.

CAUTION:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

CAUTION:

Never use any fuel-burning or oxygen-consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.



TO VIEW FULL SELECTION OF OUR PLAY TENT PRODUCT LINE, GO TO WWW.GIGATENT.COM

STYLE #:CT031T / CT031D

WARNING :
NEVER LEAVE CHILDREN UNATTENDED.
WINDY CONDITIONS MAY UPROOT THE TENT.
ALWAYS STAKE DOWN TENT.
ADULT SUPERVISION REQUIRED.
AGES 3 AND UP RECOMMENDED.

WARNING:

Keep all flame and heat away from tent and tent fabric. This tent meets flammability requirements of CPFA -84 . THIS TENT IS NOT FIRE PROOF. IF LEFT IN OPEN FLAME THE TENT WILL BURN.

Contents and colors may vary. Please retain package or future reference.

For questions or concerns call Gigatent at our Toll Free Number: 877-836-8701
Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST
or email us at customerservice@gigatent.com
For replacement parts login to gigatent.com/replacements



Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care).

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing customerservice@gigatent.com. We highly recommend logging on to our website at www.gigatent.com should you need customer service. Any parts in need of replacement after the 14 Day Manufacturer's Warranty can be purchased for a reasonable charge, plus shipping and handling. We require that products accepted for any repair must be properly cleaned according to our care instructions.

WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

WARNING : NEVER LEAVE CHILDREN UNATTENDED.

AGES 3 AND UP RECOMMENDED.

Play tent for indoor and outdoor use.

Keep all Flame and Heat away from tent and tent fabric.

This tent meets flammability requirements of CPAI-84.

THIS TENT IS NOT FIRE PROOF.

IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION: Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.

MADE IN CHINA.