



Owner's Manual

MODEL # CT063/ Princess Tower
Dimensions: 40" Diamter x 53"



DESCRIPTION	QTY.
TOWER TENT	
100% Polyester	1 ____
POLES	
Fiberglass Pole; Black	4 ____
STAKES	
Metal	4 ____
CARRY POUCH	
100% Polyester	1 ____

ASSEMBLY INSTRUCTIONS

STEP 1:

Confirm product contents by emptying contents of bag(s) and confirming all parts are included and undamaged.


STEP 2:

Select a smooth level site and pop open your tent.

STEP 3:

Extend angled poles.

Insert longer side of angled pole in the pole pocket on inside bottom of tent. Slide opposite end of pole in pole pocket at inside peak of tent. Secure pole with ties inside of tent. Repeat process with the remaining tent poles.

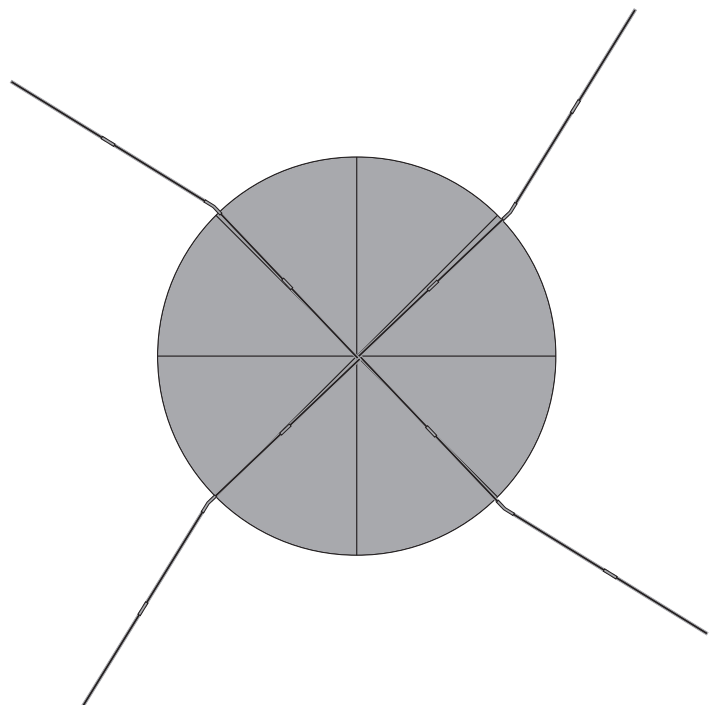

For questions or concerns call Gigatent at our Toll Free Number: 877-836-8701
Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST or email us at customerservice@gigatent.com
For replacement parts login to gigatent.com/replacements

WASHING & CARE INFORMATION

Hand wash using a mild dishwashing soap and soft sponge, then allow the fabric to completely air dry. To prevent mold or mildew do not store wet or damp.

WARNING :
NEVER LEAVE CHILDREN UNATTENDED.
WINDY CONDITIONS MAY UPROOT THE TENT.
ALWAYS STAKE DOWN TENT.
ADULT SUPERVISION REQUIRED.

AGES 3 AND UP RECOMMENDED.

CAUTION:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty

WARNING:

Keep all flame and heat away from tent and tent fabric. This tent meets flammability requirements of CPFA -84 . THIS TENT IS NOT FIRE PROOF. IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION:

Never use any fuel-burning or oxygen-consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death

Contents and colors may vary. Please retain package or future reference.


Manufactured in China for
Gigatent
55 Haul Rd
Wayne, New Jersey 07470
www.gigatent.com
1-877-836-8701

TO VIEW FULL SELECTION OF OUR
PLAY TENT PRODUCT LINE,
GO TO WWW.GIGATENT.COM

STYLE #:CT063



Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care).

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing customerservice@gigatent.com. We highly recommend logging on to our website at www.gigatent.com should you need customer service. Any parts in need of replacement after the 14 Day Manufacturer's Warranty can be purchased for a reasonable charge, plus shipping and handling. We require that products accepted for any repair must be properly cleaned according to our care instructions.

WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

WARNING : NEVER LEAVE CHILDREN UNATTENDED.

AGES 3 AND UP RECOMMENDED.

Play tent for indoor and outdoor use.

Keep all Flame and Heat away from tent and tent fabric.

This tent meets flammability requirements of CPAI-84.

THIS TENT IS NOT FIRE PROOF.

IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION: Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.

MADE IN CHINA.